



1. **READ ALL INSTRUCTIONS**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons do not immerse appliance, cord, or plugs in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool (90 min) before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact a Keurig Authorized Distributor to report any malfunction of or damage to the brewer.
7. The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.

**IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should be followed, including the following:

**cUL** US

9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off" (if applicable), then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Use brewer in upright position only.
14. The appliance must be grounded using a properly grounded 3-hole outlet.
15. Only use pods intended for this appliance. If the pod does not fit, do not force the pod into the appliance.
16. **SAVE THESE INSTRUCTIONS**

1. **WARNING:** Keep all plastic bags away from children.
2. **WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury do not lift the handle or otherwise open the handle during the brew process.
3. **WARNING:** Used K-Cup® pods should be removed from the pod holder, and the drip tray and water reservoir (if applicable) should be rinsed clean regularly, or in part with the daily cleaning routine.
4. **CAUTION:** Keurig® recommends using only Keurig® K-Cup® pods in this appliance. Non-Keurig® brand pods may cause brewer malfunction or injury.
5. **CAUTION:** There are two sharp needles that puncture the pod, one above the K-Cup® pod holder and the other in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
6. **POWER CORD INSTRUCTIONS:**
  - a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
  - b. Longer detachable power-supply cords or extension cords are available and may be used if core is exercised in their use.
  - c. If a long detachable power-supply cord or extension cord is used:



7. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.
- i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
- iii. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

#### How do you obtain warranty service?

Keurig® brewers are high-quality appliances and, with proper care, are intended to provide years of satisfying performance. However, should the need arise for warranty servicing simply call your Keurig Authorized Distributor (KAD) who originally sold you the brewer or your Keurig Authorized Service Provider (KASP) for full support. To be re-connected with your KAD or KASP, please call Keurig at 1.888.287.2739 ext. 5. Keurig Green Mountain, Inc., 33 Coffee Lane, Waterbury, VT 05676.

#### Open Source Compliance

For information on the open source compliance for this brewer, please visit <https://commercial.keurig.com/compliance>.



Authentic, full-flavored  
coffeehouse taste.



Have questions? We're here to help.

Visit [commercial.keurig.com](https://commercial.keurig.com) for troubleshooting videos, maintenance recommendations, and the full Use & Care Guide.

Still need help? Give us a call at 1.888.287.2739 ext. 5

DC0000004025 REV A

#### Warranty

Keurig Green Mountain, Inc. warrants to the original purchaser that its brewer will be free of defects in materials or workmanship under normal use for one year from the date of purchase. Keurig, a Keurig Authorized Distributor or Service Agent will, at their option, repair or replace a defective brewer under this warranty without charge upon its receipt of proof of the date of purchase. If a replacement brewer is necessary to service this warranty, the replacement brewer may be new or reconditioned. If a replacement brewer is sent, a new limited one-year warranty will be applied to the replacement brewer. This warranty only applies to brewers operated in the United States and Canada. This warranty gives the original purchaser specific legal rights, and you may also have other rights that vary from state to state and, in the case of Canada, from province to province. If you obtained this brewer through sale or rental from a Keurig Authorized Distributor, you may also want to refer to your distributor's warranty policies. Only the use of Keurig® K-Cup® brand pods and accessories will guarantee the proper functioning and lifetime of Keurig® K-Cup® brewer. Any damage to or malfunction of your brewer resulting from the use of non-Keurig® K-Cup® brand pods and accessories may not be covered by this warranty or may result in a service fee if the damage or malfunction is determined to be caused by such use.

#### What is not covered by the Limited Warranty?

THIS WARRANTY DOES NOT COVER CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND DOES NOT COVER INCIDENTAL COSTS AND EXPENSES RESULTING FROM ANY BREACH OF THIS WARRANTY, EVEN IF FORESEEABLE. Some states or provinces do not allow the exclusion or limitations of incidental or consequential damages, so the above limitation or exclusion may not apply to you depending on the state or province of purchase. Nor does this warranty cover damages caused by use of non-Keurig® K-Cup® brand pods or accessories, services performed by anyone other than Keurig or its authorized service providers, use of parts other than genuine Keurig® parts, or external causes such as abuse, misuse, inappropriate power supply, or acts of God.

#### Other Limitations

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER EXPRESS WARRANTY, WHETHER WRITTEN OR ORAL. IN ADDITION, KEURIG HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES WITH RESPECT TO YOUR K-2500™ BREWER, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Some states or provinces do not allow disclaimers of such implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you depending on the state or the province of purchase.





FOLD




FOLD



## GET BREWING FASTER

Scan this QR code with a mobile device:

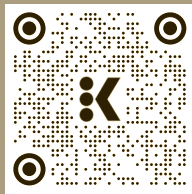

OR, go to: [commercial.keurig.com/training](https://commercial.keurig.com/training) to view a quick start video demonstrating these steps.



## BEFORE YOU BREW



### Remove Locking Screw

To install the Water Reservoir Kit, first remove the locking screw. When facing the rear of the brewer, the screw is located on the bottom right corner. **Save the screw** and set it aside; you will need it in Step 3.



### Insert Dock

Slide the dock into the left-hand side of the brewer until it "clicks" into place; the "click" indicates that it is properly connected.




### Secure Dock

Secure the dock to the brewer by replacing the locking screw from Step 1.




### Power On

Locate the power switch on the back of the brewer and turn the brewer on. The brewer's touch screen will display "Add water."

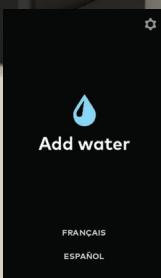

### Place Reservoir

Fill the reservoir with water up to the MAX fill line, then place the reservoir on the dock.

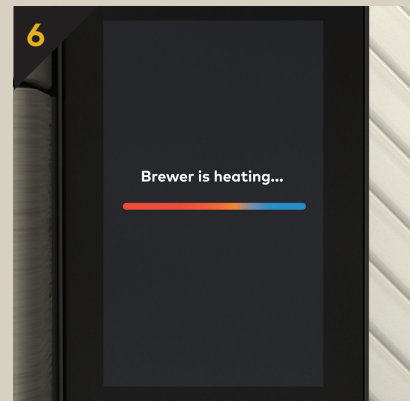

### Heat Water


Once the reservoir is in place, the brewer will automatically transfer the water from the reservoir to the hot water tank and begin heating. The heating process will take about three minutes. During this time, the brewer's touch screen will display "Brewer is heating."



### Lift & Lower

Place a mug on the drip tray plate and then fully raise the handle. Lower the handle to close the lid over the K-Cup® pod holder.

**NOTE:** A K-Cup® pod should not be used for this sequence.

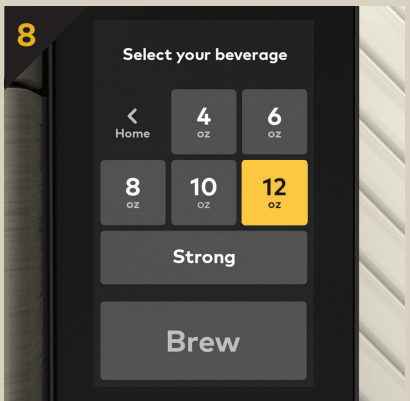

### Cleansing Brew

When prompted to select your beverage, press **12 oz** to start the cleansing brew. When the cleansing brew is complete, discard the hot water from the mug. The brewer will enter its idle state and will be ready to brew your first K-Cup® pod.

**CAUTION:** While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

## BREW YOUR FIRST CUP




### Place Mug & Pod

Place a mug on the drip tray plate. Lift the handle, and place a K-Cup® pod in the K-Cup® pod holder.


Lower the handle completely to close the lid.

**NOTE:** Do not remove the foil lid on the K-Cup® pod.

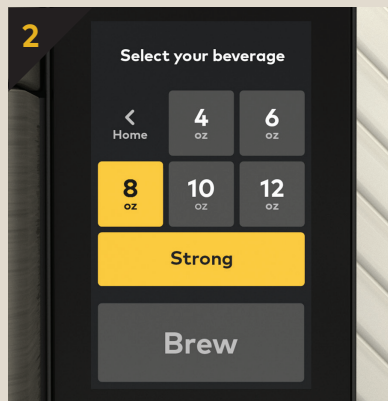

### Select Your Brew

The display will show a choice of 4, 6, 8, 10, and 12 oz brew sizes, as well as an option to brew on Strong. Select your brew size by pressing the corresponding button on the touch screen. You may choose to press the **Strong** button either before or after selecting your brew size.

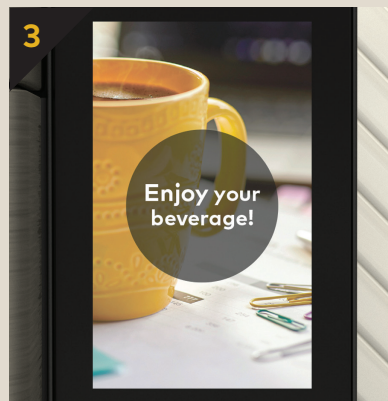

### Brew & Enjoy!

When your desired selections are highlighted in yellow, press the **Brew** button. Brewing is complete when you see the display "Enjoy your beverage!"

## BREWER FEATURES

The **K-2500™ Brewer** has the capability to have a plumbed or refillable water source. For more information on how to plumb your brewer, please contact your Keurig® Authorized Distributor.

**Strong Brew** increases the strength and bold taste of your coffee's flavor. For bolder coffee, press the **Strong** button so it is highlighted in yellow, and select your brew size.

**Commercial Rating** ensures that the K-2500™ brewer will stand up to the demands of your coffee station. Enjoy the convenience of a touch screen, an industrial easy-grip handle, and a plumbed water tank for back-to-back brewing.

**Brewing Iced Beverages:** Fill a 16-oz cup (do not use glass) to the top with ice and place a K-Cup® pod in the K-Cup® pod holder. Select your brew size—we recommend selecting 6 oz or 8 oz on **Strong**. Press **Brew**!

**High Altitude Brewing:** When brewing in higher altitudes (over 5,000 feet), please enable the High Altitude Brewing mode on your brewer. To enable this mode, you will need to access the Technician Menu. See your Use & Care Guide for more details.

**Travel Mug Friendly:** Remove the drip tray to accommodate most travel mugs.

## BREWER CARE

Regular cleaning keeps your brewer running smoothly. **Always be sure to turn off your brewer before cleaning.** For detailed brewer cleaning instructions, videos, and the full Use & Care Guide, visit [commercial.keurig.com](https://commercial.keurig.com).

If the brewer has been in storage, or hasn't been used for days, run a cleansing brew before brewing your beverage.

Periodically **hand-wash** the water reservoir, lid, and drip tray with warm, soapy water. Rinse clean.

**CAUTION:** Parts are not dishwasher safe.

**NOTE:** Do not dry the inside of the water reservoir with a cloth as lint may remain.

One perfect cup at a time, anytime.

